





BigIR - MK IV Vertical - Instruction Manual

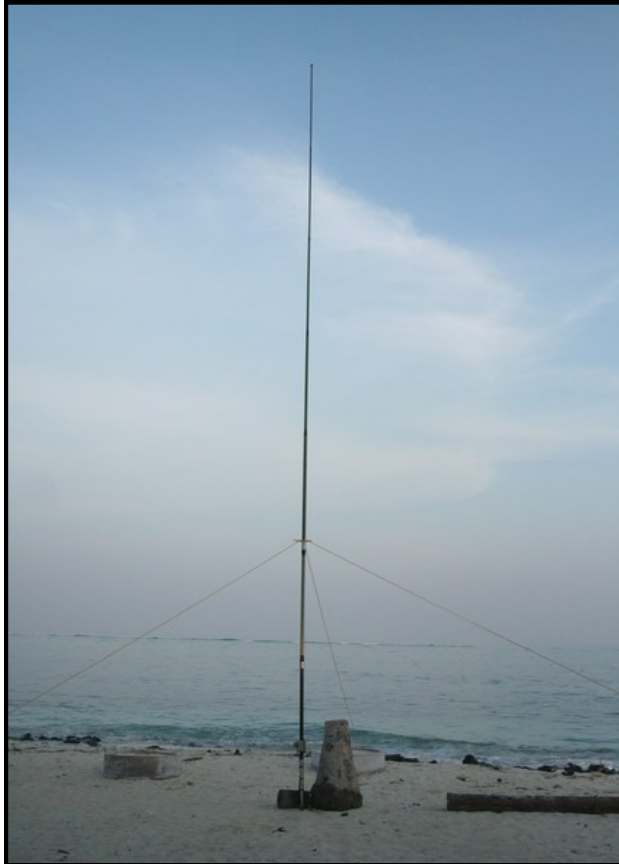

VU7LD—Laccadive

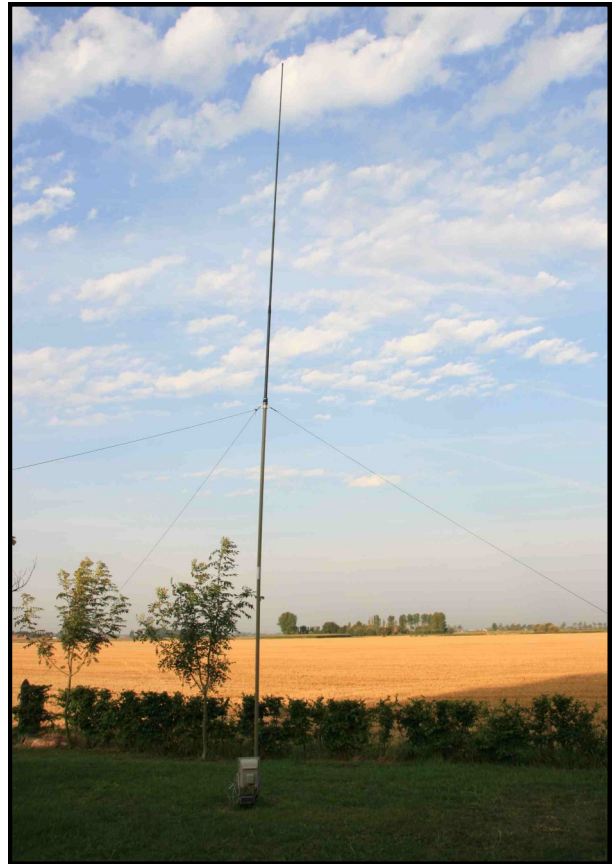

ON8DS



BS7S—Scarborough Reef



OY9R

Table of Contents	
Topic	Page
Table of contents	2
SteppIR - Why Compromise ?	3
SteppIR Design	4
BigIR vertical components	5
Installing the BigIR extension tube / telescoping poles	5-9
Installation of rain cap	6
Installing the element support extension tubes	7
Polyolefin heat shrink procedure	8
Securing the telescoping pole to the element support tube (EST) extension	9
Element housing unit (EHU) wiring instructions	10
Reinforcing assembly installation instructions	11—14
Installing the optional 80m Coil	15
Ground mounting of the BigIR vertical	16
Recommended radials for ground and above ground installations	17
Installing the optional 1:1 balun	18
More about choosing radial systems for ground / above-ground installations	19-23
Using a vertical in or on salt water	23
DB25 control cable splice assembly instructions	24
Control cable wiring schematic	25
SteppIR Warranty	26

SteppIR - Why Compromise?

The SteppIR antenna was originally conceived to solve the problem of covering the six ham bands (20m, 17m, 15m, 12m, 10m and 6m) on one tower without the performance sacrifices caused by interaction between all of the required antennas.

Yagis are available that cover 20 meters through 10 meters by using interlaced elements or traps, but do so at the expense of significant performance reduction in gain and front to back ratios. With the addition of the WARC bands on 17m and 12m, the use of interlaced elements and traps has clearly been an exercise in diminishing returns.

Obviously, an antenna that is precisely adjustable in length while in the air would solve the frequency problem, and in addition would have vastly improved performance over existing fixed length yagis. The ability to tune the antenna to a specific frequency, without regard for bandwidth, results in excellent gain and front to back at every frequency.

The SteppIR design was made possible by the convergence of determination and high tech materials. The availability of new lightweight glass fiber composites, Teflon blended thermoplastics, high conductivity copper-beryllium and extremely reliable stepper motors has allowed the SteppIR to be a commercially feasible product.

The current and future SteppIR products should produce the most potent single tower antenna systems ever seen in Amateur Radio! We thank you for using our SteppIR antenna for your ham radio endeavors.

Warm Regards,

Mike Mertel

***Michael (Mike) Mertel - K7IR
President***



SteppIR Design

Currently, most multi-band antennas use traps, log cells or interlaced elements as a means to cover several frequency bands. All of these methods have one thing in common—they significantly compromise performance. The SteppIR™ antenna system is our answer to the problem. Resonant antennas must be made a specific length to operate optimally on a given frequency.


So, instead of trying to “trick” the antenna into thinking it is a different length, or simply adding more elements that may destructively interact, why not just change the antenna length? Optimal performance is then possible on all frequencies with a lightweight, compact antenna. Also, since the SteppIR can control the element lengths, a long boom is not needed to achieve near optimum gain and front to back ratios on 20 - 10 meters.

Each antenna element consists of two spools of flat copper-beryllium tape conductor (.54” Wide x .008” Thick) mounted in the element housing unit. The copper-beryllium tape is perforated to allow a stepper motor to drive them simultaneously with sprockets. Stepper motors are well known for their ability to index very accurately, thus giving very precise control of each element length. In addition, the motors are brushless and provide extremely long service life.


The copper-beryllium tape is driven out into a hollow fiberglass elements support tube (see below), forming an element of any desired length up to the limit of each specific antenna model (a vertical uses only one side). The fiberglass elements support tubes (poles) are telescoping, lightweight and very durable. When fully collapsed, each one measures approximately 48” in length. Depending on the model, there may be additional extensions added to increase the overall element length.

The ability to completely retract the copper-beryllium antenna elements, coupled with the collapsible fiberglass poles makes the entire system easy to disassemble and transport.

The antenna is connected to a microprocessor-based controller (via 22 gauge conductor cable) that offers numerous functions including dedicated buttons for each ham band, continuous frequency selection from 40m to 6m (depending on the model). There are also 17 ham and 6 non-ham band memories and you can select a 180° direction reversal* or bi-directional* mode and it will adjust in just about 3 seconds (* yagi only).

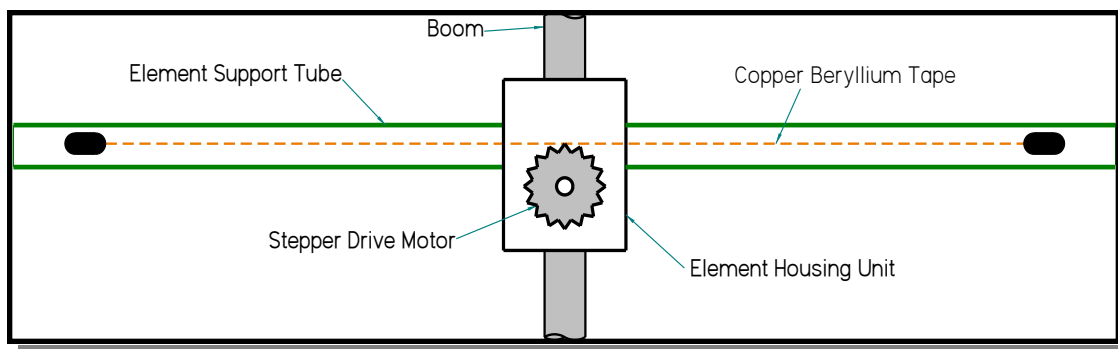

Installing the BigIR Extension Tube / Telescoping poles

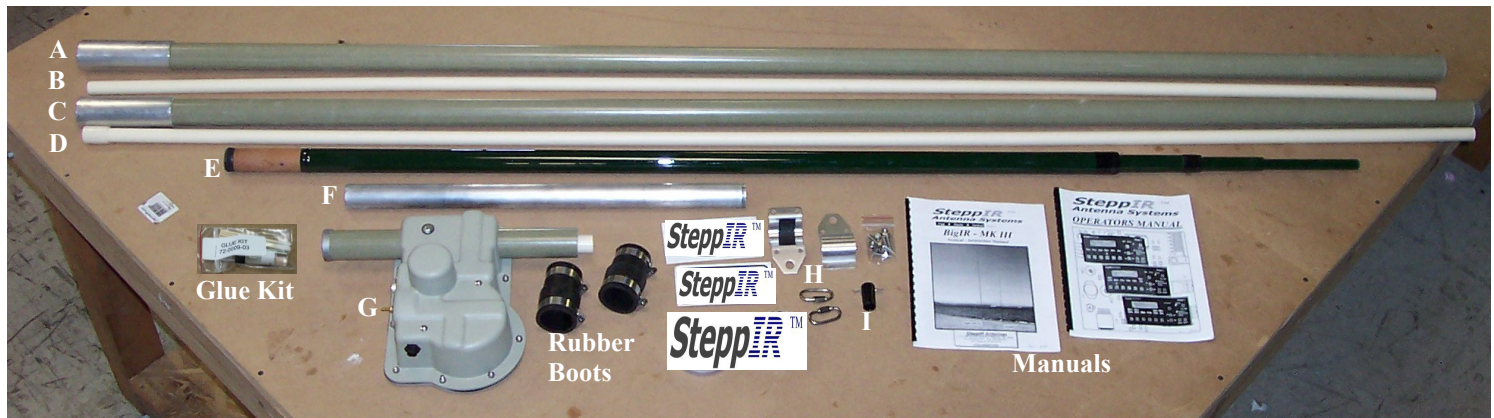

A: Lower EST Extension #70-2019-01	B: Lower diverter extension #70-2022-01	C: Upper EST extension #70-2020-01
D: Upper diverter extension #70-2021-01	E: Telescoping fiberglass pole #09200	F: 24" Aluminum mounting post #09506
G: Element housing unit (EHU) #09407	H: Guy hardware Kit #09602	I: Rain cap #10-1105-01

- Lay the element housing unit (EHU), **Figure 1 - G**, and element support tube extensions (EST) **Figure 1 - A,C** flat on their sides. There will be a 3/4" diameter piece of plastic pipe protruding out the end of the EST with a coupler attached to it (**Figure 5**).
- Firmly glue in (using the PVC primer/glue supplied) the 89" section of 3/4" diameter plastic pipe (**Figure 1 - D**), that also has a coupler attached to one end.
- Next glue in the second section of 3/4" diameter plastic pipe (**Figure 1 - B**) with the inside chamfered ends.

NOTE: If you need to take the antenna apart in the future you can cut the 3/4" diameter plastic pipe (after homing the copper) a minimum of 1 in. above the coupler and when you are ready to reinstall the plastic pipe glue in a new coupler.

- Now install the two section of the EST extension tube (**Figure 1 - A, C**). The first section goes firmly onto the EHT tube and the second EST goes on to the end of the first section. (**Figure 7** and **Figure 9** on next page)

Warning: Be certain that the metal coupler on the extension ESTs firmly bottom out.

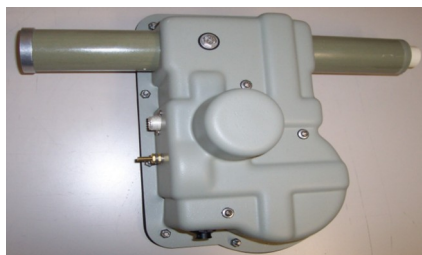


Figure 3



Figure 5



Fig 7: EST extensions with plastic diverter tube showing


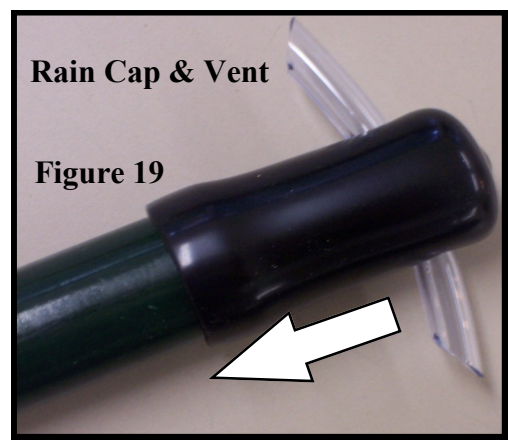


Fig 9: EST Extensions after sliding the top section over the bottom section



Installation of the Rain Cap

On the tip of the pole you will install a black cap (**Figure 19**) with a piece of tubing passing through it. The purpose of this vent cap is to keep the rain out, yet still allow air flow through the foam plug into the telescoping pole.

Warning: Press the cap on approximately 1-1/8" (**Figure 20**). Do NOT press the cap down so hard as to crimp (damage) the cross tube preventing the pole from properly venting.

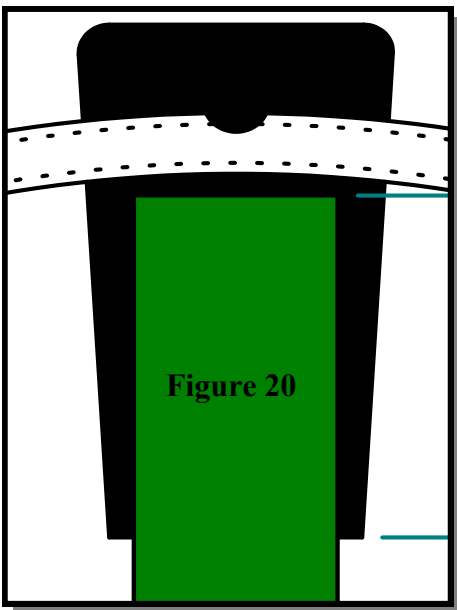


BigIR EST Extension Tube Instructions

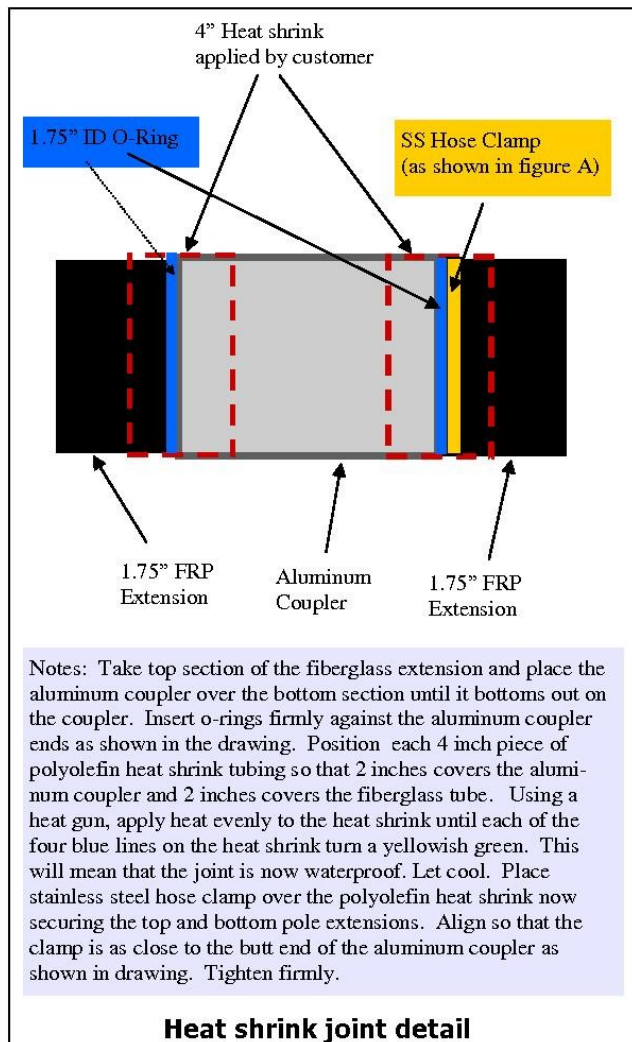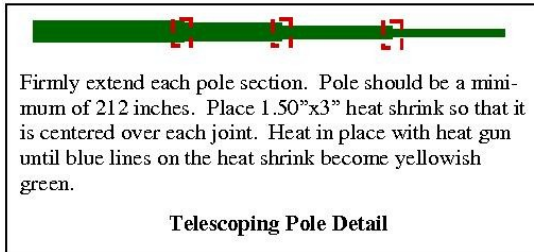

72-1003 Parts List:

Qty 3: #03631 2.05" x 4" polyolefin heat shrink
 Qty 3: #03630 1.50" x 3" polyolefin heat shrink
 Qty 1: #60-6000-20 2.0" SS Hose clamp
 Qty 3: #10-1104-11 1.75" OD O-ring

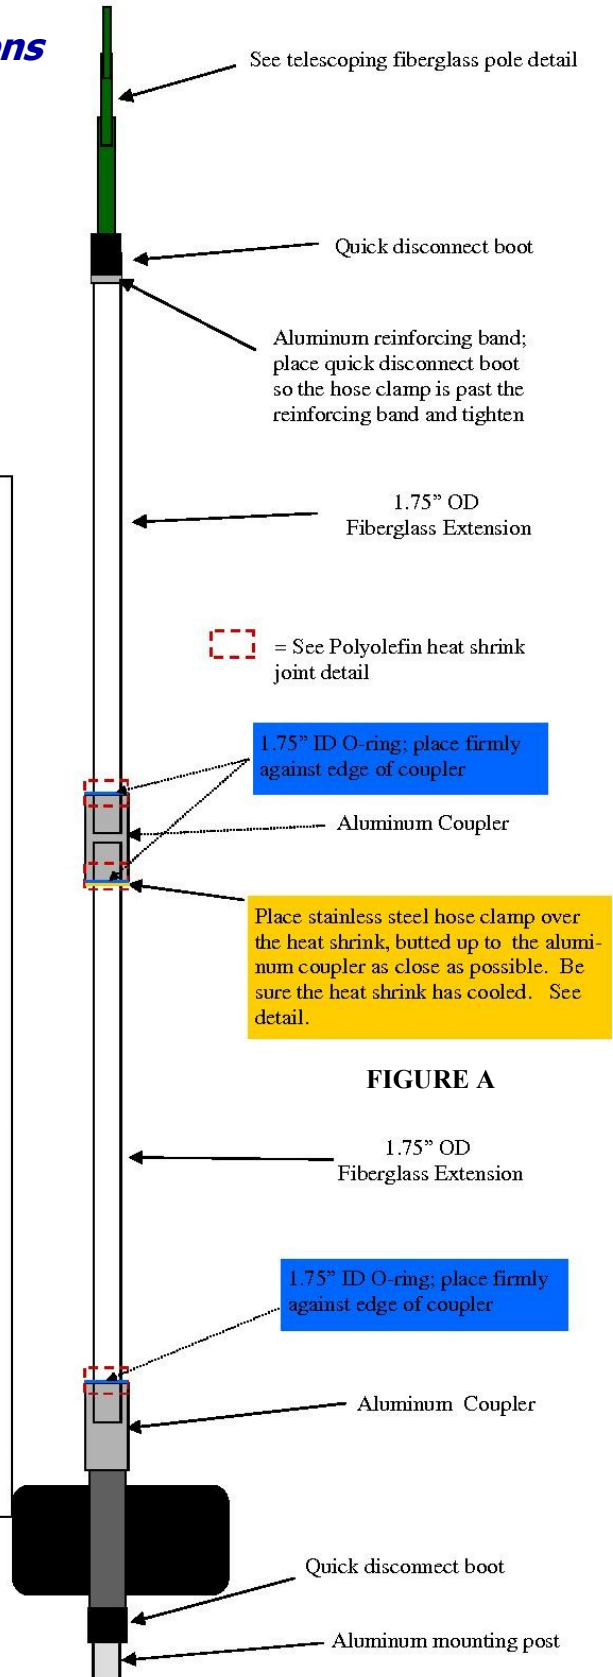

Polyolefin Heat Shrink Installation

On all elements we now include double wall polyolefin heat shrink, part number #03630. Each telescoping pole uses 3 pieces of the 1.5" x 3" long heat shrink, which forms an adhesive bond that is heat activated. Once finished, the seal is secure and waterproof. This new process replaces the use of electrical tape and silicone wrap. Note: The EST extension tubes will use the 2.05" x 4" heat shrink, as shown on page 7.

This product requires a heat gun for activation of the adhesive. When positioning the heat shrink, place it so that the joint of the telescoping pole is centered in the middle of the heat shrink. The pictures below exhibit how this is done. Apply heat around the entire area of heat shrink.

Note: There are 4 blue colored lines imprinted on the tubing. The joint is considered done being heated and waterproof when the lines change color to a yellowish green. Each line needs to change in color to ensure even adhesion temperatures. With this change, there is no longer any need to tape the joints on the loop elements.




Attaching the Telescoping Pole to the EST Tube Extensions

NOTE: The pole was tested at the factory prior to shipping, however in the event the pole won't fit sanding it is okay.

Locate the rubber boot.

- Place the narrow end of a rubber boot onto the butt end of the EST (pole). Slide it about 6" out onto the EST (**Figure 21-A**).
- Insert the butt end of that EST into the extension tube until the raised black ring is approximately 1/2 in. above the extension tube (**Figure 21-B**).
- Push the rubber boot firmly onto the extension tube until the screw clamp is past the aluminum ring and will clamp down onto the fiberglass (**Figure 21-C**).
- The upper screw clamp should be past the raised black ring to get the proper seal on the telescoping pole (**Figure 21-C**).
- Firmly tighten both stainless steel screw clamps. Then test the connection by pulling and twisting it. There should be no slippage at the joints.

NOTE: You should re-tighten each clamp a second time (at least 30 minutes after the first time you tightened them) before raising the antenna to the tower, to be sure that there has been no cold flowing of the PVC material on the rubber boot.

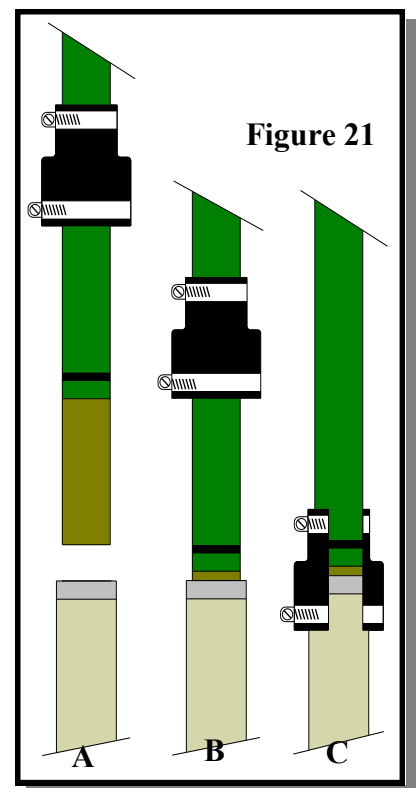

Element Housing Unit (EHU) Wiring Instructions

EHU ASSEMBLY - BigIR Vertical

Follow the directions below for wiring the BigIR element housing unit (EHU). Refer to page 24-25 for instructions on connecting the other end of the control cable to your Electronic Controller.

NOTE:

- Follow **figure 8.14** for wiring and routing cable in the wire tray on the lip of the EHU.
- Follow the wiring code that is printed on the circuit board inside the EHU as shown in **figure 8.15**.
- Be sure to unplug the top portion of the connector when wiring, as you cannot see the correct wiring code until the upper plug is removed.
- The correct wiring code is printed closest to the terminal block and reads left to right: **Bk (black), R (red), G (green), W (white)** and ignore Blu & Br (The Blue and Br holes are not used when wiring the BigIR).
- The wiring tray that is molded into the EHU housing also acts as a strain relief, but care should be taken in not putting too much tension on the control cable.


Wiring EHU

Figure 8.14

NOTE:

Wire the cable to the correct terminal on the wiring connector board. Follow the color code on the circuit board as shown in **figure 8.15**. Route the wire into the wire tray. Place a .25" piece of the provided coax-seal over the cable and form it so that its flush with the wire tray. Do this in the 3 locations shown below. (This will keep the cable in place and prevent water from leaking into the EHU.)

Fig 8.15

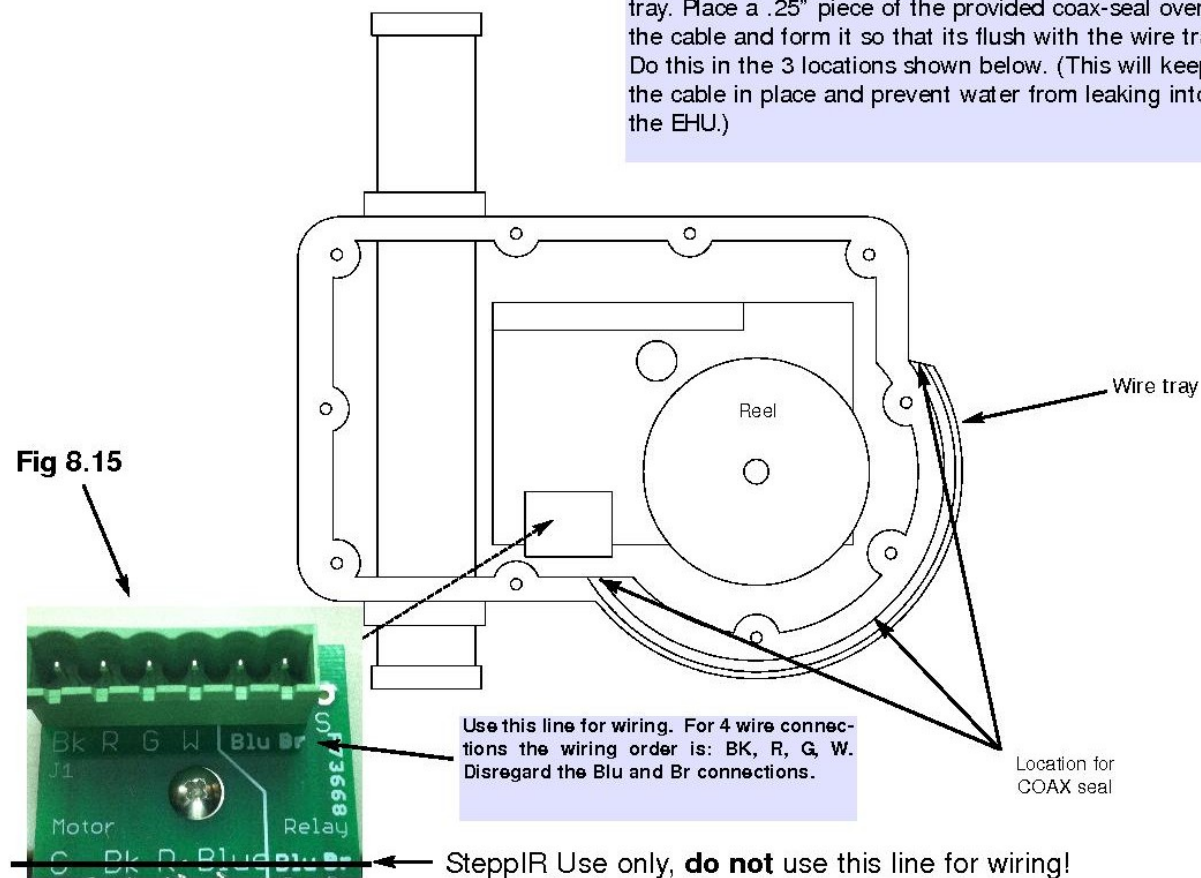


BigIR Mark IV Reinforcing Plate Installation

NOTE: The new BigIR Mark IV vertical model was introduced in November 2011. All BigIR vertical antennas are now made to the specifications of the Mark IV. This next section describes how to install the reinforcing kit for your BigIR vertical. The pictures below show the completed reinforcing kit installation.



BigIR Wind Reinforcing Kit
without 80m coil

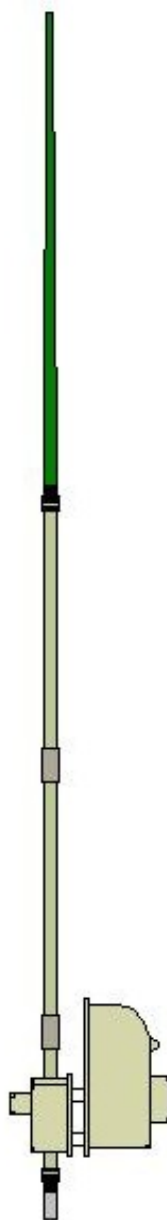

BigIR Wind Reinforcing Kit
with 80m coil

BigIR EHU Wind Reinforcing Kit—Hardware list

Hardware included for BigIR without the 80m coil:

Qty	Part Number	Description
1	10-1501-22	EHU Lid
1	10-1021-52	Reinforcing plate
5	60-0017	#10 x 3/4" Pan head bolt
5	60-0071	#10 x 1" Pan head bolt
15	60-0018	#10 Washer
10	60-0019	#10 Nylock nut
2	60-0066	5/16" x 4" Hex head bolt
2	60-0114	5/16" x 3.75" Hex head bolt
4	60-0046	5/16" Nylock nut
10	60-0033	5/16" Washer
4	10-1613-11	5/16" x 1/4" Aluminum spacer
2	10-1601-03	1.75" Aluminum saddle half
2	10-1601-22	2" Aluminum saddle half
1	09-1022-08	8" Coax-seal
1	10-1502-12	EHU Gasket
1	10-1028-01	Anti-seize packet


Additional hardware included for BigIR with the 80m coil:

Qty	Part Number	Description
5	60-0095	#10 x 2" Pan head bolt
4	10-1004-02	0.50" Plastic spacer
2	10-1613-11	1/4" x 5/16" Aluminum spacer

Wind reinforcing kit installation instructions (continued)

- Follow the instructions for preparing the wiring for the BigIR EHU. This step must be done before placing the lid on the EHU. Refer to figure 8.14 on page 10 for more detail on wiring the EHU.
- The reinforcing plate has a short side and a long side, as shown in **figure 8.1**. It is critical that the reinforcing plate be mounted as shown in **figure 8.14**, or the saddles will not align properly.
- Place the EHU and the EHU gasket on top of the lid as shown in **figure 8.2**. Use the PN 60-0071 #10 x 1" screws to attach the reinforcing plate to the EHU, gasket and lid. Each screw will have a PN 60-0018 #10 flat washer underneath the head of the screw and also underneath the Nylock nut as shown in **figure 8.4**. **Figure 8.1 shows screw placement**. For the 5 bolts that connect the reinforcing plate to the EHU you will only use a washer on the plastic EHU housing. Use the PN 60-0017 #10 x 3/4" screws to attach the rest of the lid to the EHU.
- Note: If you are installing with the 80m coil option, be sure to read the instructions on **page 14** before installing the reinforcing plate as there are different instructions at this juncture.

Figure 8.1

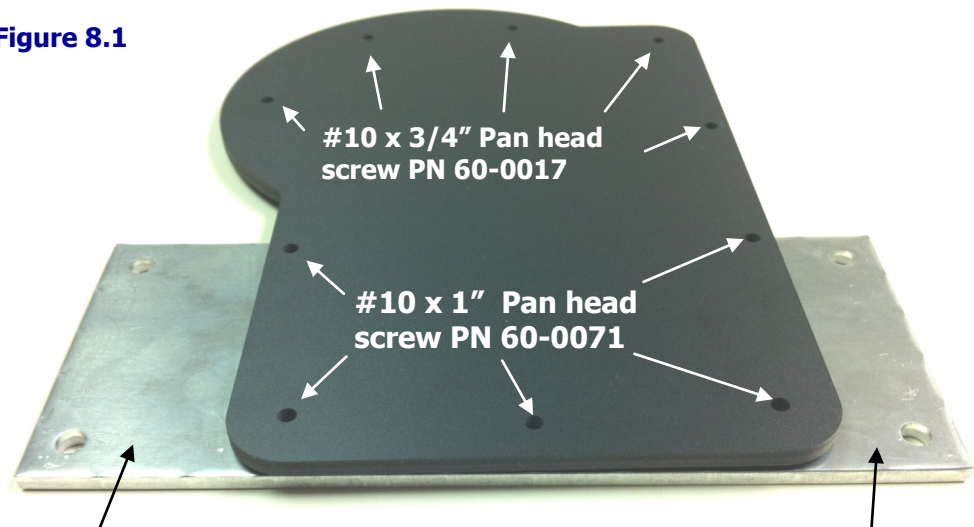

LONG SIDE OF REINFORCING PLATE

SHORT SIDE OF REINFORCING PLATE

Figure 8.2






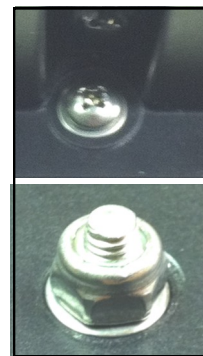


Figure 8.4




Wind reinforcing kit installation instructions (continued)

- Insert a 2" aluminum saddle half (10-1601-32) underneath the element support tube (EST) protruding from the EHU. This will be located on the long end of the reinforcing plate. Place underneath the saddle a single aluminum spacer (10-1613-11) and a single 5/16 washer (60-0033) as shown in **figure 8.5**. Slide a PN 60-0066 5/16" x 4" hex head bolt (thread end pointing skyward) through the spacers and the saddle on each side of the EST. Be sure to use anti-seize on **all** of your stainless steel fasteners or you will have galling issues.
- Place the bottom portion of the EST extension tube (70-2019-01) over the side of the EHU that has the white plastic coupler protruding. This will be on the "long" side of the reinforcing plate. Be certain that the aluminum coupler at the bottom of the EST extension firmly bottoms out.
- Place the second half of the aluminum saddle as shown in **figure 8.7**. Loosely place the PN 60-0046 Nylock nuts on the threaded bolts.
- Repeat on the short side of the reinforcing plate by inserting a 1.75" aluminum saddle half (10-1601-03) underneath the element support tube (EST) protruding from the EHU. This will be located on the short end of the reinforcing plate. Place underneath the saddle a single aluminum spacer (10-1613-11) and a four of the 5/16 washer (60-0033) as shown in **figure 8.6**. Slide a PN 60-0114 5/16" x 3.75" hex head bolt (thread end pointing skyward) through the spacers and the saddle on each side of the EST.
- Tighten the saddles. Be sure to use no more than 15 ft lb of torque or the fiberglass EHU pieces could be damaged. **Figure 8.8** shows the tightened saddles. Try to make the saddle halves as even as possible as shown in **figure 8.7**.
- Refer to the picture on **page 9** for a look at a completed BigIR reinforcing assembly.

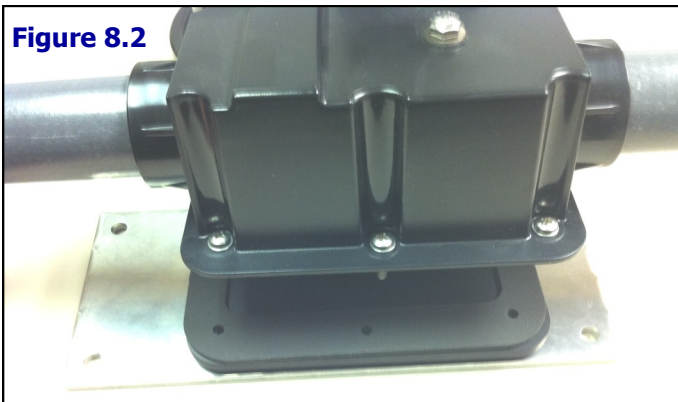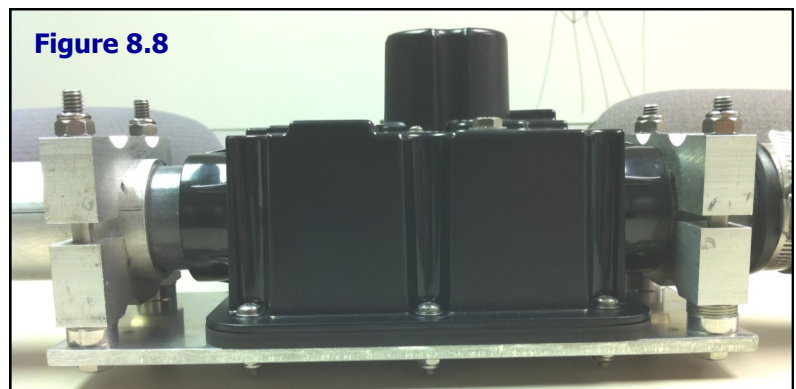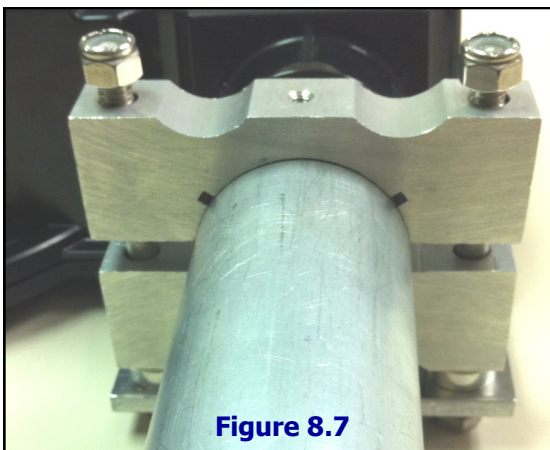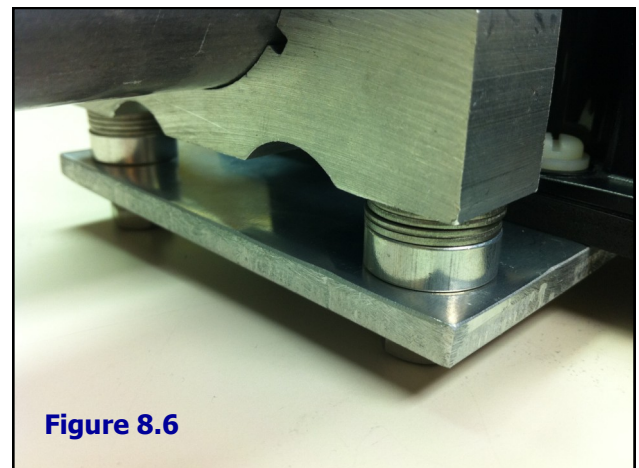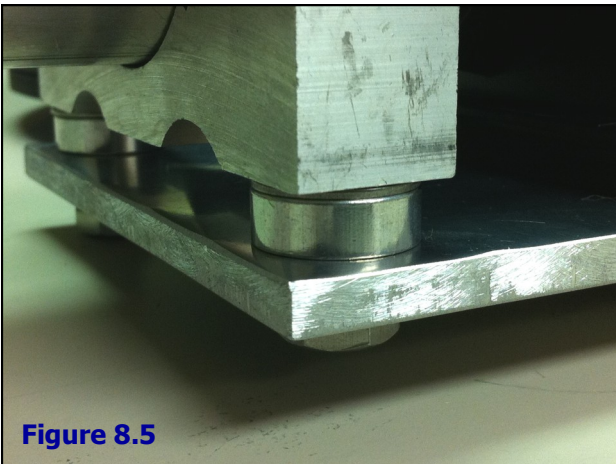

Wind reinforcing kit installation instructions—80m Coil Option

- If the 80m coil will be mounted to the BigIR, the standard pan head screws must be replaced with #10 x 2" screws (60-0095). Refer to **figure 8.9** to locate which holes to use the #10 x 2" screws.
- There are two spacers on the end of the EHU without the wind reinforcing plate. One is a 0.50" plastic spacer (10-1004-02), and the other a 0.250" aluminum spacer (10-1613-11) as shown in **figure 8.10**.
- There is a single 0.50" spacer on the end of the EHU that has the wind reinforcing plate attached as shown in **figure 8.11**.
- It is difficult for the nut to sit flat on the 80m coil cover, so for the four #10 x 2" pan head bolts used for mounting we have you put the threads upward, with the Nylock nut being attached on the EHU side of the connection. Even though the #10 x 2" long screw is reversed, be sure that you still place a flat washer on the EHU side of the screw (between the Nylock nut and the EHU housing) as shown in **figure 8.12**.
- Place the screws through the 80m cover and the reinforcing plate/EHU lid and tighten.
- Do not forget to use anti-seize for all fasteners and be sure to NOT over-tighten.
- **Page 9** shows a picture of a completed BigIR with 80m Coil installation.
- Follow the rest of the BigIR installation guide for connecting the 80m coil to the BigIR.

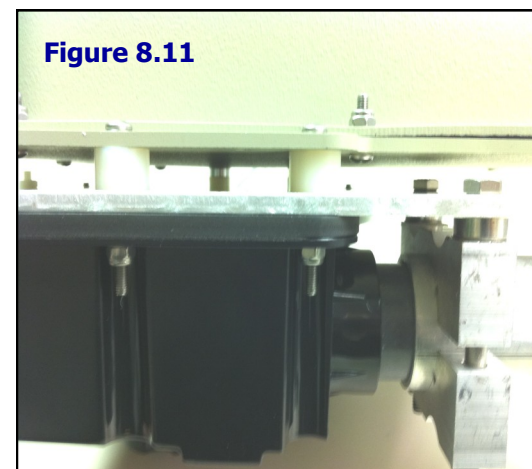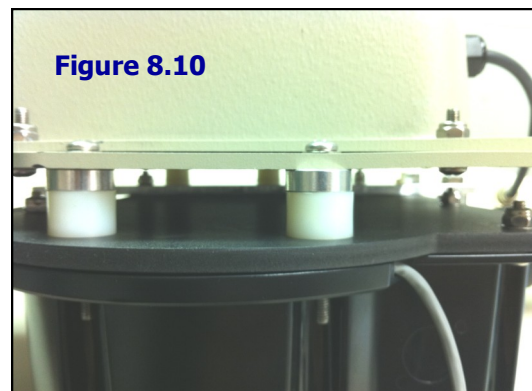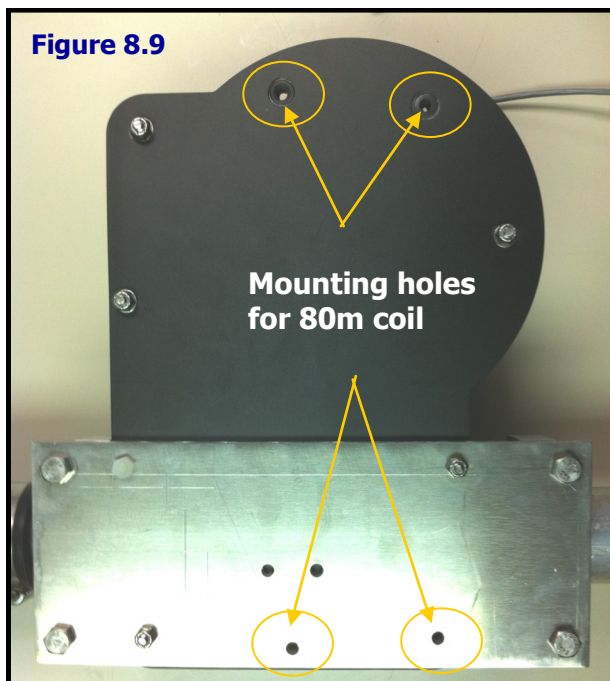

Mounting the BigIR (ground)

The BigIR comes with a 1.5" OD aluminum mounting post, 2 feet in length (**Figure 1 - D**). If using guy wires, the antenna can be mounted directly into the ground without concrete (the guy wires will “lock” the antenna in place) but you want to ensure that the mounting pole does not shift or settle over time, using concrete to secure it in the ground is a good way to eliminate the potential for this problem. Position the mounting pole (machined end up) so that the bottom of the element housing is **8 to 10 inches** above the ground (**Figure 29**).



At this point you want to decide on your guy configuration and mount the guy bracket (s) and attach the guy wires before erecting the antenna (**Figure 35, 36 & 37**).

- | | |
|--|---------|
| • No Guy Wires | 50 mph |
| • One set of guy wires | 70 mph |
| • Two sets of guy wires (optional bracket) | 100 mph |

One guy wire connects to one side of the guy bracket and two guy wires connect to the other side of the guy bracket using the **two** security snaps (**Figure 31**).

With the mounting post is in place and level and your guy assembly mounted, you are ready to erect the antenna. Now slide the small end of the flexible coupler (rubber boot) to the mounting post (**Figure 41**). This coupler is used to keep the antenna from potentially “twisting” in high winds. Pick up the antenna at the base (**Figure 33**) and slide the antenna housing onto the mounting pole until it firmly bottoms out. Place the larger end of the flexible coupler over the antenna housing tube (a small amount of bar soap or other lubricant will help the process). Tighten clamps on the coupler and secure the guy wires.

Now you are ready to connect the radials! We recommend using a lug connector (crimped & soldered) at the end of your radials, and then tightening the lug onto the connector (ground) post shown in **Figure 39**. If you purchased the optional radial kits (**Figure 28**), you will notice there are 4 wires per set (ground radials), all soldered and crimped to a lug connector.

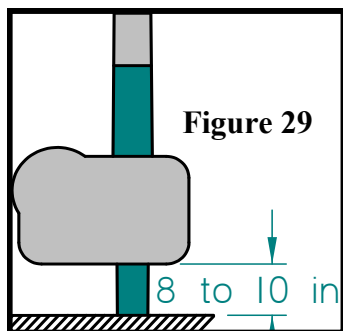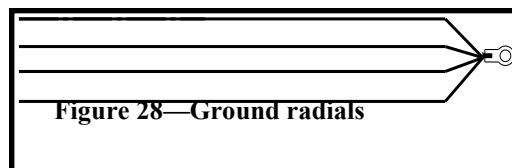

Recommended Radials

Ground Mounting:

- Min. of 12 - radials cut to the lowest frequency

Elevated Mounting:

- Min. of 2 pre band trimmed to $.1 \times$ frequency






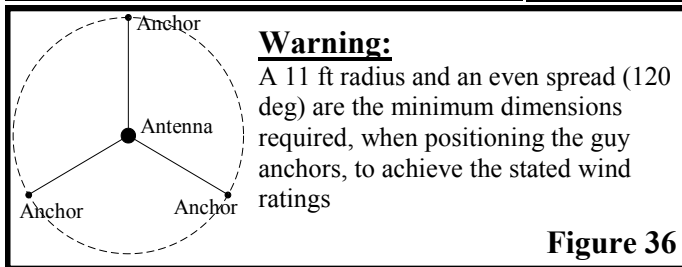


Figure 36

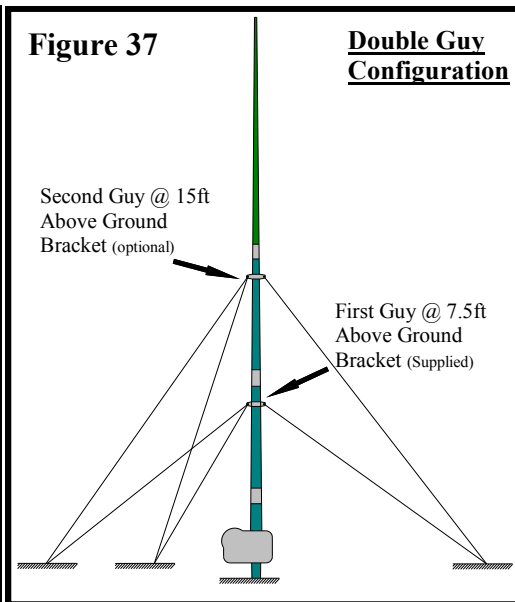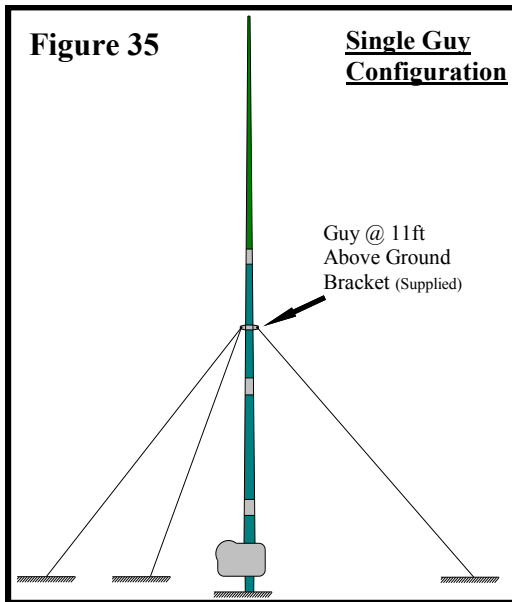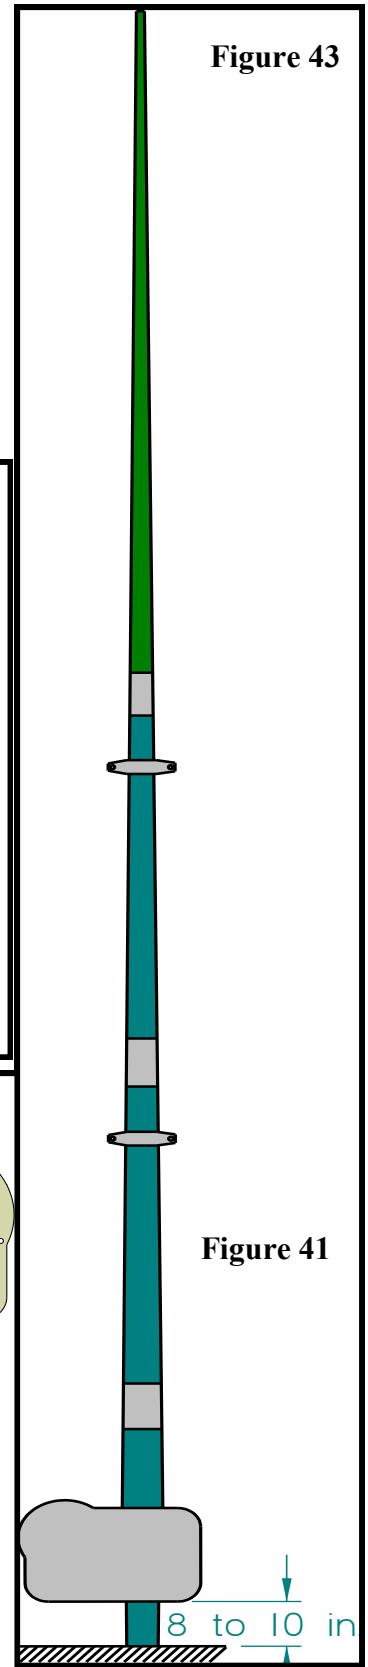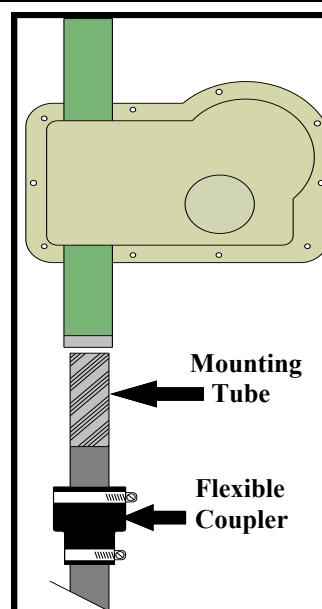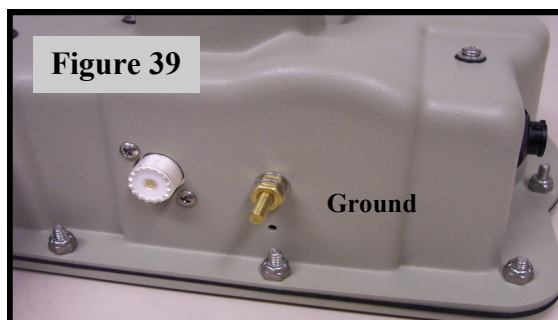


Optional (1:1) External Balun

A balun is an electrical circuit used to help resolve the inherent problem of feeding an antenna with an electrically unbalanced (coax) feed line. It is intended to present an infinite impedance to any RF current that might otherwise flow on the outer conductor (shield) of the coax producing radiation from the line. This current, if high enough, can cause heat buildup and potential damage to the radio as well as a distorted radiation pattern.

Why is it Optional ?:

In the normal configuration, ground mounted with 12 or more radials, the ground will bleed/drain the unwanted RF signal from the coax shield.

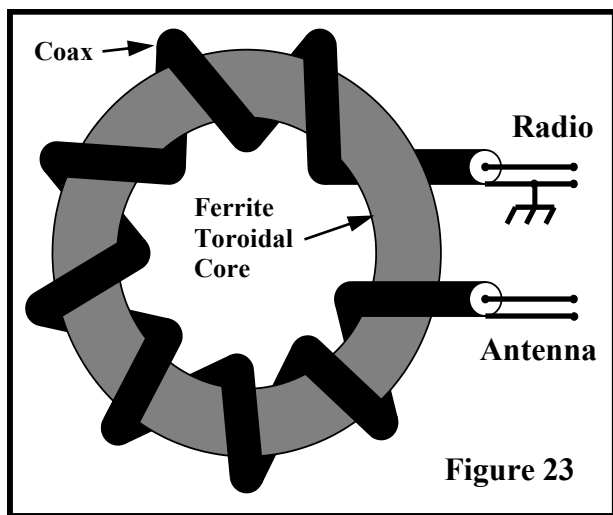



When Should You Use A Balun ?:

- When elevating the base of a vertical antenna above the ground
- When only a few radials are used
- When the coax run is shorter than the radials
- When the ground condition is poor
- Unusual SWR readings on one band

Balun Installation

The balun is shown in figure 25. There is a mounting flange with 4 holes molded into the housing. There are numerous options for mount-

ing the balun—by far the most popular is to mount the balun on an adjacent post or similar structure, or even on a piece of wood that rests on the ground. Figure 26 shows how to connect the balun when using the BigIR without the 80m coil. Figure 27 shows how to connect the balun with a BigIR and optional 80m coil.

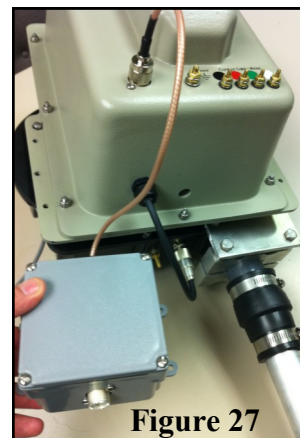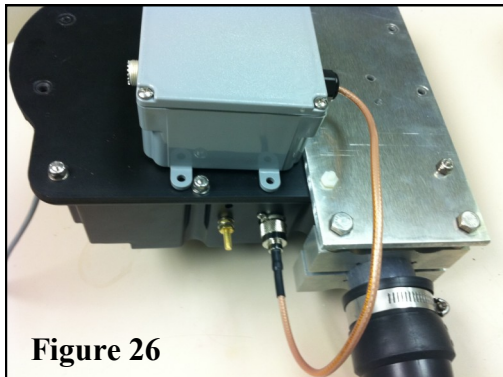

Radial Systems for Elevated and Ground mounted Vertical Antennas

All vertical monopoles need some form of counterpoise in which antenna image currents flow to work efficiently. This counterpoise usually consists of a system of radial wires placed either on the ground or elevated above ground.

This is not an in depth publication but simply a general guide on installing and using the Step-pIR verticals. There is much more information available in various publications if you need it. The ARRL Antenna Handbook is a good source for additional information.

By following a few simple guidelines, you can obtain excellent performance from vertical antennas mounted on the ground or elevated above the ground. There are a number of verticals available that say “no radials required”, but they do have “radials”, in the form of a shortened, tuned counterpoise system. As you might expect, you pay a price for such a small counterpoise system - less efficiency.

As you will see in the following pages, you can get fairly high efficiency with a relatively modest radial system that will far outperform small counterpoise systems. It should be noted that counterpoise systems are only good for curing near field losses caused by losses from the earth, which is a poor conductor of RF, even with good soil. There is nothing you can do about far field losses that reduce the signal strength and low angle radiation, except get to some saltwater. We briefly discuss salt water locations later on in this article.

Ground Mount or Elevate?

Ground Mounting:

PROS

- The radials can be any length and they work on all frequencies
- Easy to mount
- Easy access
- Lower visual profile
- Eight to twelve 0.1 wavelength radials gives 60% - 65% efficiency (one set of 8 - 12 radials cut to 0.1 wavelength at lowest frequency)

CONS

- Takes 120 radials to equal an elevated vertical with 2 resonant radials (90% efficient)
- Surrounding objects can reduce signal strength

Elevated Mounting:

PROS

- + 90% efficient with two .25 wavelength radials
- Antenna is generally more “in the clear”, so surrounding objects don’t cause as much attenuation
- A peaked metal roof will make a very good all-frequency radial system


CONS

- Requires two .25 wavelength radials for each band of operation (radials interact, so spacing will affect length)
- Mounting is generally more involved
- Visually higher profile
- Must be mounted high enough that people won’t walk into it
- Needs to be about .2 wavelengths high to get an ideal 50 ohm match
- Radials need at least a 20° slope to get a good match
- Involves adjusting and fine tuning the radial lengths

Ground Mounting:


If you chose to ground mount the vertical, pick a spot that will allow you the best chance of spreading your radials evenly around the antenna, and away from trees and other objects if possible. Mount the antenna within one foot of ground if possible, the closer to ground the better. Next, you will need to determine how much effort and wire you are willing to invest in this installation. The tradeoffs are as follows:

1. More radials equals higher efficiency (see **Graph 1**)
2. More short radials are generally better than a few long ones
3. If only a few radials are going to be used, they need not be very long
4. If you have very good earth (very few of us actually do), you can obtain good performance with very few radials.

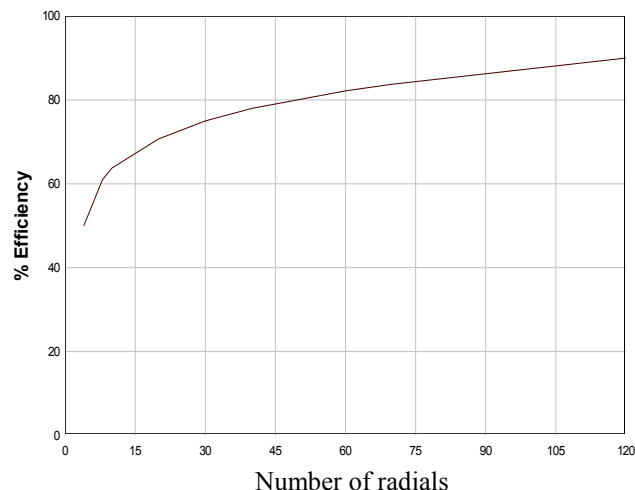


Graph 1

Four radials are what we consider to be the absolute minimum in average soil. How much you have to gain with a good radial system depends on how good your earth is. Most of us have poor earth conditions, so the radial system is important. The worse the earth is, the more can be gained with radials. **Graph 2** shows a graph produced by Brian Edward (N2MF) that illustrates the relative signal gain you get with the radials and varying length over poor earth. With better earth, the gain difference between 4 radials and 120 radials will be about 2.5 dB, as opposed to 4 dB with poor earth.

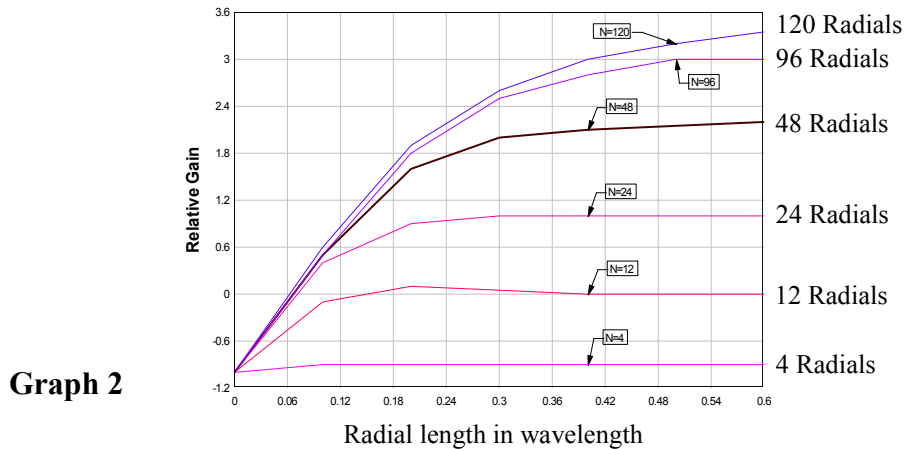


If you are restricted to .1 wavelength radials there is not much advantage to using more than about 24 radials. You can see from **Graph 3** that if more radials are used there is a huge advantage to making them longer.

If you cannot lay the radials out in a symmetrical radial pattern, don't worry too much - it will distort your omni-directional pattern slightly but won't reduce your efficiency very much. Lay the radials out in the best manner possible given your situation. There are various ways to accomplish laying a radial system, including turning corners, etc. Good results are limited only to your creative energy and determination! Be aware that very high voltages can exist at the ends of radials, so be certain that no one can come into contact with them. It is a good idea to use insulated wire to protect from corrosion, and don't bury the radials any deeper than necessary, one to three inches is sufficient.

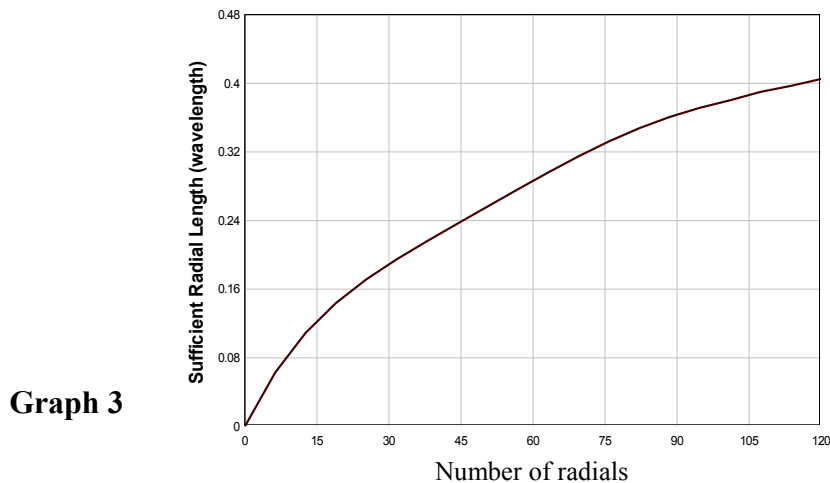

Elevated Mounting:

You can elevate a vertical just a few feet from the ground (4 feet for 20m, 8 feet for 40m) and get fairly good performance with just 2 radials (elevated as well) per band of operation. The problem is you won't have a very good match to 50 ohms, and the close proximity of the earth will degrade the signal - especially if it is poor earth. For ideal matching, we recommend .2 wavelength (about 15 feet on 20m and 30 feet on 40m) at the lowest planned frequency of operation. As the height decreases below .2 wavelength, the ground losses start to increase, unless you have very good ground. When a vertical is raised off the ground the impedance drops fairly rapidly from 36 ohms (Over perfect ground or with many radials it will be close to 36 ohms, over real ground it is generally 40– 60 ohms) to about 22 ohms when .3 wavelength is reached. This would make a pretty poor match to 50 ohms, so a couple of tricks are in order. Once you elevate a vertical, two radials are all you really need. It is important that you try to keep a 180° angle between the two (opposed, directly in line) for the best pattern. Spread the radials out as far as possible to reduce interaction, if they are less than a foot apart it can be difficult to get a good match on all bands. To facilitate a match to 50 ohms you can angle the radials downward, this raises the impedance of the antenna as you increase the angle downward. **Graph 4** shows the approximate relationship of radial angle to impedance:

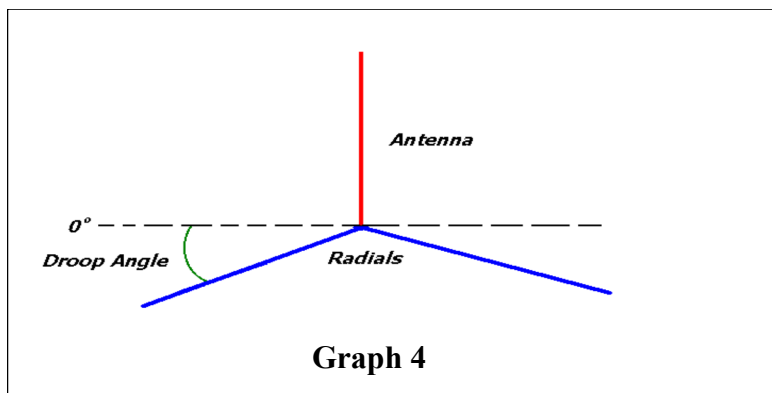

Radial Droop Angle		Antenna Impedance
0°	=	22 Ohms
10°	=	28 ohms
20°	=	35 ohms
30°	=	47 ohms
40°	=	53 ohms
50°	=	55 ohms
Note: above 50° results in diminishing returns		

Can't get enough droop angle to achieve a good match? Simply adjust the antenna element slightly longer than the factory 1/4 wavelength (up to 20% longer) settings and the impedance will rise. This will cause the radials to be too long, so they may need to be pruned a bit. Be aware that increasing the antenna 2% to 3% longer may require radials to be 5% to 7% shorter. Once you have a good match, replace the factory default values by saving the new antenna (to do this you will use the "create, modify" feature in the setup mode).

When the vertical is elevated you can get away with just one resonant radial, however, the pattern won't be omni-directional. You will have -12 dB to 15 dB null in one direction

Using a Vertical in on or Near Salt Water:

If you are lucky enough to have a dock over salt water, a vertical can offer unparalleled performance for low angle DX. Simply mount the vertical to the dock and attach two radials per band of operation. They can be stapled right to the dock if it is non-metallic. Mounting the vertical in ground flooded by salt water a couple of times per day can be equally effective. Proximity to the ocean improves the far field loss of a vertical and allows very low angle radiation - get as close to the water as possible to enhance performance.

Due to the fact that RF does not penetrate more than 2 inches into the water, direct coupling (a wire in the water) is difficult. Objects like metal floats or boats, providing they are large enough, can make good grounds in salt water. If you are using a metal boat or large metal object, corrosion is no longer a problem because the large surface capacitively couples to the water. When using a small metal float (3 ft x 3 ft is just enough to "connect" to salt water), you want to be certain that the metal does not corrode over time. For long term immersion, Monel is a good (but fairly expensive) choice.



DB 18 Control Cable Splice Assembly Instructions



Figure 1



Figure 2

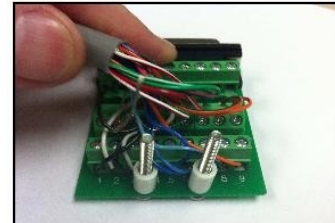


Figure 3



Figure 4



Figure 5



Figure 6

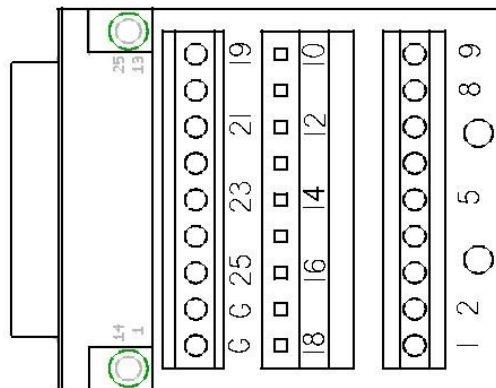


Figure 7

The DB25 control cable splice allows for much more convenient connection of control cable to the SteppIR controller. By utilizing this connector splice, there is no need to cut the DB25 connector off and re-solder when running cable through conduit. In addition, now you can purchase custom cable lengths to within 1 foot of your desired length, eliminating potential for excess cable. To install the DB25 control cable splice, follow these instructions:

1. Locate the parts needed for installation shown in figure 1.
2. Strip the grey jacket and aluminum shielding off of the control cable as shown in figure 2, approximately 2.75" from end of control cable, being careful not to damage the individual wires. Strip the plastic insulation off of each of the control cable wires, approximately 0.25" in length should be bare wire (fig 2). It helps to twist each of the stranded wires, to aid in the placing of the wire into the terminal headers. Tinning the wires with solder also works well.
3. Connect each wire to the appropriate terminal as shown in figure 3. Consult drawing 21-6005-91 for the correct wiring sequence, there are multiple wiring sequences on this drawing depending on your model of antenna.
4. Insert the two stainless steel screws into the circuit board, as shown in figure 3. Slide the two plastic spacers onto the screws.
5. Insert the first half of the strain relief clamp onto the two screws (half-round bump facing upward) on the two screws (fig 4). Be careful not to pull the wires out of the terminal headers as you push the strain relief clamp downward.
6. Insert the second half of the strain relief clamp onto the two screws (half-round bump facing downward as shown in figure 5).
7. Position the control cable in between the two halves of the strain relief clamp, be sure that the jacketing of the cable is in between the clamps (fig 5).
8. Using the nuts, tighten down until the cable is nice and snug, but do not over tighten (fig 5).
9. Plug the DB25 splice into the back of the controller and tighten the jack screws to secure the DB25 to the controller housing, as shown in figure 6.
10. While it is not required, you may optionally use silicone wrap to cover the wiring, as shown in figure 7.

70-6010-01



Cable Pin out by cable type.

Wiring Diagram- DB25 Cable Splice

Adapter Pin number		16 conductor Standard 4E		16 conductor DB11, DB18		12 conductor 2E, 3E Yagi		2X4 Conductor	
20 conductor		16 conductor		12 conductor		4 Conductor			
	1	BLACK	BLACK	BLACK	BLACK		Black		Black
	2	WHITE	RED	RED	BROWN		Red		Red
	3	WHITE/ BLACK STRIPE	GREEN	GREEN	RED		Green		Green
	4	BLACK/ WHITE STRIPE	WHITE	WHITE	ORANGE		White		White
	5	BLUE	BROWN	BROWN	YELLOW		Black		
	6	BLUE/ WHITE STRIPE	BLUE	BLUE	GREEN		Red		
	7	BLUE/ RED STRIPE	ORANGE	ORANGE	BLUE		Green		
	8	BLUE/ BLACK STRIPE	YELLOW	YELLOW	VIOLET		White		
	9	ORANGE	VIOLET	VIOLET	GREY				
	10	ORANGE/ RED STRIPE	GREY	GREY	WHITE				
	11	ORANGE/ BLACK STRIPE	PINK	PINK	PINK				
	12	GREEN	CREME	CREME	CREME				
	13	BLACK/ RED STRIPE		WHITE/ ORANGE ST					
	14	GREEN/ WHITE STRIPE	WHITE/ BLACK ST						
	15	GREEN/ BLACK STRIPE	WHITE/ RED ST						
	16	RED	WHITE/ GREEN ST						
	17	RED/ WHITE STRIPE	WHITE/ ORANGE ST						
	18								
	19								
	20								
	21								
	22	WHITE/ RED STRIPE		WHITE/ RED ST					
	23	RED/ BLACK STRIPE		WHITE/ BLACK ST					
	24	RED/ GREEN STRIPE		WHITE/ GREEN ST					
	G	Drain	Drain	Drain	Drain		Drain		Drain

	SteppIR Antennas.
	Cable splice, controller
	21-6005-91
	Date: 01/31/2011

Warranty / Contact Information

In the event you have a problem with your SteppIR product, please contact:

Tech support: 425.891.6134
support@steppir.com

If you need to return your antenna for repair, please go to www.steppir.com, fill out the **Return for Repair** form, print a copy and put it into the package that you send back to SteppIR.

STEPPIR ANTENNAS LIMITED PRODUCT WARRANTY

Our products have a limited warranty against manufacturers defects in materials or construction for two (2) years from date of shipment. Do not modify this product or change physical construction without the written consent of Fluidmotion Inc, dba SteppIR Antennas.

This limited warranty is automatically void if the following occurs: improper installation, unauthorized modification and physical abuse, or damage from severe weather that is beyond the product design specifications.

SteppIR Antenna's responsibility is strictly limited to repair or replacement of defective components, at SteppIR Antennas discretion. SteppIR Antennas will not be held responsible for any installation or removal costs, costs of any ancillary equipment damage or any other costs incurred as a result of the failure of our products.

In the event of a product failure, a return authorization is required for warranty repairs. This can be obtained at www.steppir.com. Shipping instructions will be issued to the buyer for defective components, and shipping charges to the factory will be paid for by the buyer. SteppIR will pay for standard shipping back to the buyer. The manufacturer assumes no further liability beyond repair or replacement of the product.

Stepp***IR*** TM